

## ACCESSORIES




RADIOCONTROL



AUGER



DOWN THE HOLE HAMMER

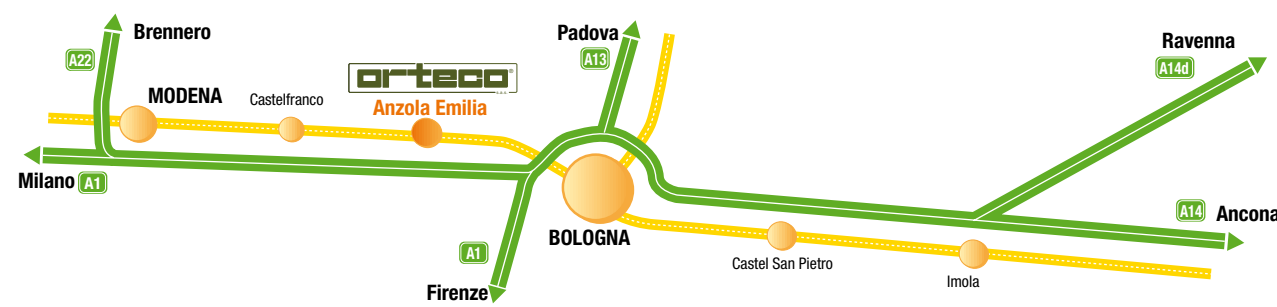

**orteco**<sup>®</sup>  
s.r.l.

Via 2 Giugno, 19 • 40011 Anzola Emilia (Bo) • Italia  
Tel. +39 051 731051 • Fax +39 051 731925  
E-mail: [orteco@orteco.com](mailto:orteco@orteco.com) • Internet: [www.orteco.com](http://www.orteco.com)

Uw dealer:

**ASINTRA**  
Asfalt-Innovatie & Training

Postbus 2059  
7301 DB Apeldoorn  
[info@asintra.nl](mailto:info@asintra.nl)  
[www.asintra.nl](http://www.asintra.nl)  
Tel: 0620248145

BASIC  
400  
600

**orteco**<sup>®</sup>  
s.r.l.

“NUOVI  
ORIZZONTI”

Pile driver ORTECO BASIC on crawler is designed and made to perform the work of fixing the posts at the best.

The adopted light weight and the technical solutions aim at reducing costs and, lowering consumption and noise, to protect the environment.



**BASIC**  
**PILE DRIVER ON CRAWLER**






## TECHNICAL DATA

MODEL:		400	600
Hammer rating	joule	240/360	450/590
Blows per minute	n.	800/1200	650/1000
Inclination kit		standard	standard
KUBOTA Diesel Engine		D1305	D1305
Electric starting	volt	12	12
Noise level	dbA	112	112
Horse Power (at 3000 RPM)	Kw (CV)	21,7 (29,5)	21,7 (29,5)
Max pressure	Mpa	15	15
Oil flow	dm <sup>3</sup> /min	60	60
Oil tank capacity	dm <sup>3</sup>	110	110
Diesel tank capacity	dm <sup>3</sup>	50	50
Total weight	kg	2170	2200

Manufacturer reserves the right to change the technical features above mentioned without prior notice. Pictures may show not standard accessories.

### DIESEL ENGINE

The centered engine and technical solution chosen, make ORTECO BASIC pile driver very balanced, easy to load with ramps and stable at work.

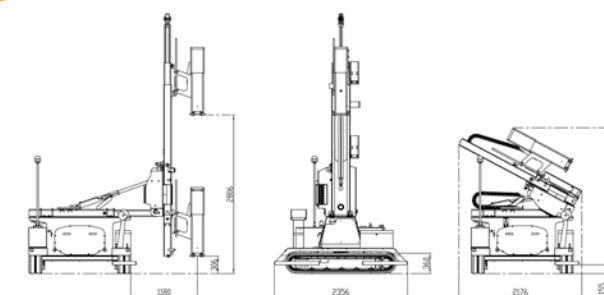

### TRANSPORT

In transport position ORTECO BASIC pile driver has such dimensions that it can be transported on the back of a normal lorry and little trailers.



### VERTICALITY

The column can be hydraulically positioned to obtain the piling of poles in vertical position even uphill or downhill.